



MiraStamp

Care and Maintenance

Congratulations on selecting Miracote MiraStamp Flooring. Just follow the recommendations below to maximize the life of your new surface.

Cleaning

Cleaning your new MiraStamp surface is simple. Just wash with mild cleaning solution such as Miracote Surface Cleaner. Use a brush to remove tough, ground-in soil, stubborn stains or residual compounds. Rinse thoroughly with clean water. Regular cleaning will prevent build-up of residue, which can make the deck surface slippery when wet. In exterior locations, keep MiraStamp surfaces swept free of leaves. Decomposing leaves will stain the finish.

Maintenance

Miracote MiraStamp can be damaged by gouging or scraping with sharp objects and should be protected against such damage. All snow removal should be accomplished using snow shovels, which must be carefully handled to avoid damaging the surface. Do NOT use ice chippers on MiraStamp. The use of chloride-type ice and snow melting compounds will not damage MiraStamp, although they may leave a white deposit, which will require careful cleaning to remove.

Miracote MiraStamp is typically coated with Miracote MiraGard HD Sealer. The traffic topping is designed to withstand normal everyday wear and direct exposure to the elements when installed as per manufacturer's application instructions. Over a period of time the traffic topping will need to be re-coated with Miracote MiraGard HD Sealer. This is required when traffic patterns become visible in the decking. This should be approximately 5 to 7 years in normal traffic areas and every 3 to 5 years in high traffic areas such as stairways and access corridors.

Should your Miracote MiraStamp installation become damaged, it can be repaired by you or a qualified MiraStamp applicator. Repair kits ("mini Kits") are available from your MiraStamp contractor. Each kit contains instructions for use.

Common Problems to Avoid

1. Do not lay rubber mats or exterior carpet-type surfacing over MiraStamp. In order to function properly, MiraStamp must "breathe". Prolonged coverage with impermeable matting may result in debonding of the MiraStamp surface.
2. Avoid heavy point loads being applied directly to the surface.
3. Do not expose the Miracote MiraStamp System to harsh chemicals or acids.
4. Do not subject the MiraStamp to continuous heavy rolling loads.



MIRACOTE PRODUCT LINE
Crossfield Products Corp.

West Coast Office	East Coast Office
3000 E. Harcourt Street	140 Valley Road
Rancho Dominguez, CA	Roselle Park, NJ
90221	07204
310-886-9100	908-245-2800
310-886-9119 fax	908-245-0659 fax

www.miracote.com